

TANKBLANKET™

PipeBlanket Operation & Maintenance

PipeBlanket is easy to retro-fit, operate & maintain.

Installed correctly, that is, in line with our installation guidelines and not abused, then normal wear and tear will see PipeBlanket serve you for many years.

To ensure PipeBlanket does not let you down please understand and follow these guidelines.

1. Make sure you only use PipeBlanket when there is liquid in the fresh water or waste tank.
2. Turn 'ON' PipeBlanket when you know the ambient temperature will approach freezing. The LED illuminated switch will indicate there is power to the circuit.
3. Turn 'OFF' the PipeBlanket power switch when the ambient temperature is above freezing or there is no fluid present in the pipe.
4. Periodically, do a visual check of your PipeBlanket to ensure cables, connections and PipeBlanket pads are as installed and have not been damaged or become unconnected.

Note: PipeBlankets are NOT sensor controlled. PipeBlanket has been developed, tested, and designed to be used as a heating device for Leisure vehicle fresh & waste water system pipes constructed of standard grade rigid plastic. Premier Leisure Products assumes no liability for any use of the product for purposes other than what is consistent with the original design & testing.

Tip: To preserve your habitation battery charge, where available, use PipeBlanket in conjunction with a 240V hook up.

Note: The TankBlanket system is modular in design and can be upgraded at anytime resulting in the ultimate winterisation system!

-----//-----